



iVIEW-705NB

# USER'S MANUAL



## 7" CyNet Netbook

To assure the product to work in best status  
please read the users manual carefully before operation and keep it well for future use

# Contents

<b>Table of Contents</b> .....	1
<b>1. Outlook Description</b> .....	3
<b>2. Power Button Usage</b> .....	4
<b>3. USB Interface</b> .....	4
<b>4. Using SD Card</b> .....	5
<b>5. Keyboard</b> .....	5
<b>6. Getting Started</b> .....	6
Charge the device .....	6
Wi-Fi Network Setup .....	6
<b>7. Desktop</b> .....	7
<b>8. Screen Lock</b> .....	7
<b>9. Pre-loaded Applications</b> .....	8
<b>10. Desktop Function Menu</b> .....	9
<b>11. King Kong Apps Market</b> .....	10
<b>12. WmtWeather</b> .....	11
<b>13. Clock</b> .....	11
Alarm .....	11
<b>14. Browser</b> .....	12
<b>15. Calendar</b> .....	12
Add Event .....	12
<b>16. Recorder</b> .....	13
<b>17. Calculator</b> .....	13
<b>18. Email</b> .....	13
Add Email accounts .....	13
Email Inbox .....	14
Edit Email Account .....	15
Delete Email Accounts .....	15
<b>19. File Browser</b> .....	15
Copy Media between Computer and Tablet .....	16
Delete files .....	16
<b>20. My Music</b> .....	16
Play Music .....	16
The Operation with Music and Playlist .....	17
<b>21. My Video</b> .....	17
Play Video .....	17
The Operation with Video and Playlist .....	18
<b>22. My Photo</b> .....	18
Doodle .....	19
<b>23. Contacts</b> .....	19
Add New Contacts .....	19

Add Contact to Favorites .....	19
Edit Contacts .....	19
Delete Contacts .....	19
<b>24. Picture Capture</b> .....	<b>20</b>
<b>25. PK Manager</b> .....	<b>20</b>
Stopping Applications .....	20
Uninstall Applications .....	20
<b>26. Wi-Fi Settings</b> .....	<b>20</b>
<b>27. ADSL Settings</b> .....	<b>21</b>
<b>28. Ethernet</b> .....	<b>21</b>
<b>29. Settings</b> .....	<b>22</b>
<b>Troubleshooting</b> .....	<b>24</b>
<b>Battery Management</b> .....	<b>25</b>
<b>Important Safety Precautions</b> .....	<b>25</b>
<b>Appendix I : The list of the main key function</b> .....	<b>26</b>
<b>Specifications</b> .....	<b>27</b>

Thank you for purchasing iView products,  
for technical support or more information  
please visit us on **WWW.IVIEWUS.COM**  
or CALL US at **(909) 627-9888**

iView-705NB features many great functions for great companion for keeping up with your social network, office, and entertainment. It is lightweight with slim look for easy portability. You can access the internet wirelessly anywhere and browse the website, send your email and instant message, listen to music, play movies and apps. Embedded with **King Kong Apps Market** with thousands of useful and fun apps you can easily access and download the apps that tap your need.

1. Outlook Description


Front:



Right side:



Left side:

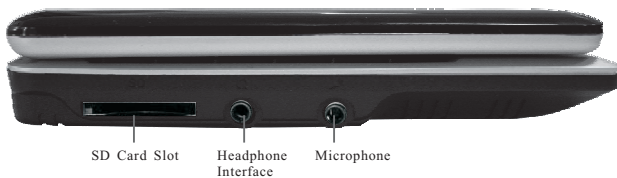

**Top:**



## 2. Power Button Usage



**Turn On/ Off:** Press the power button and hold for 2 seconds. Tap OK to power off.

**Sleep Mode On/Off:** Press & release the power button quickly to turn sleep mode on and off.

**Reset Button:** If device does not respond, press the reset button to reset the device. (**Note:** Current the reset function can not be restart, so after reset you need to press the power button to re-boot.)


**Warning:** Force off could lead to unpredictable system errors !y

## 3. USB Interface

### Insert U-Disk

Insert your U-disk into Cynet and will display the USB icon. Click USB icon to enter File Browser to open U disk folder.

### Remove U-Disk

Close all applications or documents which have been opened on the U-disk. Tap  → **Settings** → **SD card, U-disk & device storage** → **Unmount U-disk**. And then you can unplug the U-disk.

☆ *CyNet has three main USB Interface*

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk*


## 4. Using SD Card



☆ The device supports a maximum 16GB SD card.

Insert your SD card into SD slot until it clicks into place. It will display a card icon. Click this icon to enter card mode.

### Remove SD Card

Close all applications or documents which have been opened on the card. Tap  →





**Settings** → **SD card, U-disk & device storage** → **Unmount SD card**. Press the SD card lightly; it is partially ejected allowing you to pull the SD card out.

☆ Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the SD card.

☆ We recommend using major brands of memory SD cards to avoid incompatibility.

## 5. Keyboard


Cynet features 80 keys of standard keyboard. There are some functions of key combination

		Home
		Lock Screen

Num keyboard





Press  to change to Num mode. You can input the corresponding number by Num key. Press it again to get back to normal mode.

Commonly used buttons:

Esc: Back

Enter: OK

Arrow keys: To move to different directions (up down left right) F1:

Browser

F2: My Music

F3: My Video

F4: My Photo

F5: Calculator

F6: Wmt Weather

F7: My Recorder

F8: Clock

F9: Calendar

F10: File Browser

F11 (Fn+ F1): Task Manager

F12 (Fn+ F2): Settings

## 6. Getting Started


### Charge the device


- ☆ *You cannot charge the battery using the USB cable.*
- ☆ *You can use the device while the battery is charging, although the charging time is longer when operating and charging occur at the same time.*


Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (Approx. 4 hours).

While charging, the battery indicator light is red. When fully charged, the battery indicator light is green.

### Wi-Fi Network Setup

1. Tap , → **Settings**, → **Wireless & network**.
2. Select **Wi-Fi** to turn on.


The device automatically scans and lists all local Wi-Fi Network found. A  indicates secure networks that require login name/password to connect.

3. Tap the desired network to which you want to connect, → enter the **Network Password** if applicable, → tap **Connect**.
4. Tap  to return to the Desktop screen.

☆ *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.*

## 7. Desktop




- ☆ Tap on any application icon to launch it.
- ☆ Touch, hold and then slide icons to reposition on the screen.
- ☆ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.

## 8. Screen Lock













Lock screen displays the following:





Drag the icon  to turn on or turn off silent mode.

Drag the icon  to unlock the screen.

## 9. Pre-Loaded Applications

	<b>Wmtweather</b>	Display the weather.
	<b>Clock</b>	Use as alarm clock with scheduled alarms.
	<b>Browser</b>	Access the Internet and “surf the web” whenever desired.
	<b>Calendar</b>	Calendar with ability to set events.
	<b>Calculator</b>	Do calculation.
	<b>Email</b>	Send/Receive email using your existing email addresses.
	<b>File Browser</b>	File manager application for viewing and managing files and apps. Use to install Android Apps, and to backup files to your SD card.
	<b>My Music</b>	Play and manage audio files.
	<b>My Video</b>	Play and manage video files.
	<b>My Photo</b>	View and manage photo files.
	<b>Contacts</b>	Create a list of personal contacts, which can also be linked with your email.
	<b>Picture Capture</b>	Capture image of the screen.
	<b>PK Manager</b>	Application manager for managing processes.
	<b>Settings</b>	Multiple settings for personalizing and enhancing your Device.
	<b>Wi-Fi Settings</b>	Set Wi-Fi network.

	<b>ADSL Settings</b>	Set ADSL network.
	<b>Ethernet</b>	Configure Ethernet.

☆ To move an icon to the **Desktop** screen, touch & hold on the icon, and then release it when it appears on the **Desktop** screen.


☆ Touch, hold and then slide icons to reposition on the screen.






☆ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.

## 10. Desktop Function Menu

On the **Desktop** screen, you can tap  to display the **Function Menu**.



 <p><b>Add</b></p>	<p>The viewable portion of the <b>Desktop</b> screen allows only 16 icons. To add more items, long-touch the left-key, and slide the touchpad (or use the USB keyboard to slide the screen) horizontally to expose available space, and then tap the <b>Add</b> icon again. If the screen is full, the <b>Add</b> icon won't respond.</p>	
<b>Shortcuts</b>	<p>Add quick launch shortcuts on the <b>Desktop</b> to applications, bookmarks or settings.</p> <p>☆ If you select items that are shortcuts already on the <b>Desktop</b> screen, they will be duplicated, resulting in multiple icons for the same item.</p>	
<b>Widgets</b>	<p><b>Analog clock:</b> Add a round analog clock.</p> <p><b>Calendar:</b> Add a calendar widget to display current date &amp; events.</p> <p><b>Music Player:</b> Add a music widget to play music</p>	

	<b>Folders</b>	<p><b>New Folder:</b> Add a folder into which you can add applications as desired. To move applications on the Desktop screen into the folder, touch, hold &amp; drag the icons directly on top of the folder icon.</p> <p>To add applications from the <b>All Application</b> screen, first tap on the folder to open it, open the <b>All Application</b> screen, and then touch &amp; hold on an application icon. It is copied into the folder.</p>
 <b>Wallpaper</b>		Select wallpaper from <b>Picture</b> and <b>Wallpapers</b> .
 <b>Search</b>		<p>Perform a quick Google search.</p> <p>Tap in the entry field, → enter the desired search text, → </p>
 <b>Notifications</b>		List any pending notifications (i.e., new email, calendar events, etc).
 <b>Settings</b>		See “Settings” on page 24.



## 11. King Kong Apps Market

• The King Kong Market is a showcase for some of the featured and top ranked applications and games available. For a comprehensive, up-to-date list of the tens of thousands of titles available, check out soft Market.

1. Click the King Kong Market icon from the desktop.
2. Choose from the list of applications .
3. Check whether the program need to be paid or not, then click”compatibility” to check compatibility.
4. Click “Install” if the programme is compatible with the device and if it’s free.
5. Register the needed information for must-be-paid programme.
6. Click “Install” to download programme after you paid for it.
7. Wait for the prompt “Do you want to install this application?”
8. Click “Install” and “Done/Open” when screen prompts “Application installed”.
9. Press [ESC]to go back and/or exit.

*Note:*

1. Applications can’t be downloaded unless it’s compatible with the device or system software.
2. When you get to the crash report dialog and press cancel, Apps menus will still work. You can use them to navigate. Even pressing ESC can restore the previous working screen. Worst case scenario would be to go to settings and force stop the application, relaunching will work,
3. Above operation must be under connected internet .



## 12. WmtWeather

### General setting

Set Temperature Unit (°C), Update frequency, and Auto Wallpaper.

### My cities


You can add city and set it to be my city.

You can make the weather displayed on the **Desktop** through adding widget. The way is:


tap  → **Add** → **Widgets** → **WmtWeather**.





## 13. Clock

Tap the  **Clock** application icon. You can see time and date.

### Alarm

☆  This clock icon displayed at the top of screens indicates that one or more alarms have been set and are active.

### Add Alarm



1. Tap the  **Clock** application icon.
2. Tap  → **Add alarm**.
3. Set up your alarm as desired.
4. Tap **Turn alarm on**.
5. Tap **Done**.

### Shut Off Alarm Alert

Tap Snooze if you want to be reminded again in 10 minutes.

Tap Dismiss to cancel the alert.

### Turn Alarm on

1. In the Alarm screen, tap  on the alarm (s) you want to turn on.
2. Tap  to turn on again.


### Edit Alarm




1. Tap the **Clock** application icon.
2. Tap on the alarm you want to edit, → make desired edits.

#### Delete Alarm



1. Tap the **Clock** application icon.
2. Tap on the alarm you want to delete.
3. Tap  → **Delete alarm**.




Tap  to return to the **Desktop** screen.



## 14. Browser



Click the browser icon on the Desktop , and then you can open the Web browser.

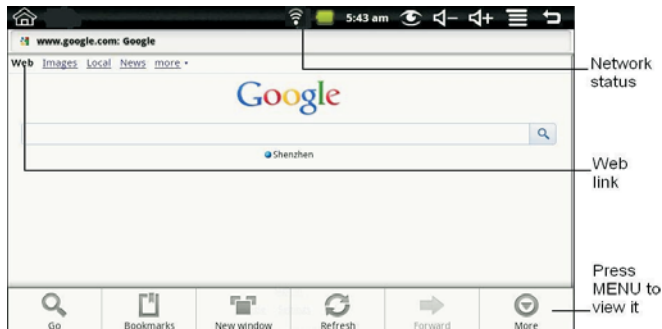

## 15. Calendar




Tap the **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Click **Next** and follow the prompts to complete the account configuration. Then you can use the **Calendar**.





#### Add Event

1. On the **Calendar** screen, tap on the date to which you want to add an event.

2. Tap on the event time, → tap in each entry field to enter the desired event information.
  3. Tap **Done**.
  4. Tap  to select desired **Calendar** screen.
- ☆ *Dates with green bars indicate scheduled events.*




## 16. Recorder

1. Tap  the recorder icon.
2. Tap  the record icon to record
3. Tap  the record icon to stop record
4. Tap  the play button to listen the voice of recording



## 17. Calculator

1. Tap the  Calculator application icon.
2. Tap the numbers and sign of operation to do the calculation.
3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.



## 18. Email

☆ *POP3 and SMTP accounts are supported.*

### Add Email accounts

You can enter one or more personal email addresses that you would like to access through your netbook.

1. Tap the  **Email** application icon.
2. On the **Your Accounts** screen, tap **Next**.

3. Tap in the **Email** address entry field, → enter your email address.
  4. Tap in the **Password** entry field, → enter your email password.
  5. Tap **Done**.
  6. **Manual Setup (Optional)**: The server settings are automatically populated based on your email account provider (i.e., *gmail.com*, etc). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
  7. Tap **Next**.
  8. Optional: Enter a name for the account.
  9. Enter name for outgoing message, → tap **Done**.
- ☆ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

## Email Inbox







1. Tap the **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account, → tap **Inbox**.




## Open Email Message

1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.
3. To replay, tap **Reply** or **Reply all**.
  - a. Tap in the Compose Mail entry field to enter your reply message.
  - b. Tap Send to send immediately. Save as draft to save without send or Discard to discard without saving or sending.
4. To delete the email immediately, tap **Delete**.

## Compose New Email Message



1. On the Inbox screen, tap  → **Compose**.
2. Tap in the **To** entry field and then enter the recipient's email address.
3. Optionally, if you want to add Cc or Bcc recipients, tap  → Add Cc/Bcc, and then enter the recipient's email address.
4. Tap in the **Subject** entry field to enter your desired subject title.
5. Tap in the **Compose Mail** area to enter your personal message.
6. If desired, tap  → **Add Attachment** to attach a file.
7. When ready to send the email, tap  → **Send**.

## Edit Email Account

1. Tap the  Email application icon.
2. On the Inbox screen, tap  → Account settings.
3. Set your desired preferences to customize your email account.
4. Tap  to return to the Inbox screen.

## Delete Email Accounts

☆ *If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.*

1. Tap the  Email application icon.
2. On the **Inbox** screen, tap  → **Accounts**.
3. Touch & hold on the account you want to delete.
4. In the pop-up **Account options** window, tap **Remove account**.
5. Tap **OK** to confirm the deletion.

## Set Default Email Account


You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the  Email application icon.
2. On the Inbox screen, tap  → **Account Settings**.
3. Tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



## 19. File Browser

Tap the  **File Browser** application icon to view the files on all storage devices (*Internal memory, SD card, USB device*), and to quickly & easily install Android application on your Tablet.



Local disk (Internal memory)



Your SD card



U-disk/USB flash drive



Allows you to multi-select items



Display previous folder






Create a new folder

## Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device or directly use an USB cable to connect the device and the computer and then copy files.

☆ *The internal device storage is titled “LocalDisk”, a memory card “sdcard”, and a USB storage device is titled “udisk”.*

☆ *The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1. Tap the  or  to display the contents of your storage device.
2. Tap and hold in the folder/file you want to copy, → tap **Copy**.
3. Tap on the  Internal Memory, → tap on the folder into which you want to copy the file, → tap **Paste**.

## Delete files





Tap and hold on the folder/file you want to delete, → tap **Delete** → **OK** to confirm the deletion.



## 20. My Music

☆ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

### Play Music


1. Tap the  My Music application icon.
2. Select an audio file from All/Albums/Artists/Directories/My Favorites/User Defined Playlists to play it.
3. To stop the music, tap the Pause  icon.
4. To leave the music playing and return to previous screens, tap  or tap  to return to the Desktop screen.

Tap the photo on the left corner to enter the Music Player interface. It displays as below:



## The Operation with Music and Playlist


### Add playlist

1. Tap the User Defined Playlists  Add New Playlist.
2. Input the playlist name.
3. Tap Add.


### Rename or Delete playlist

Tap and hold in the playlist, → tap **Rename** or **Delete**.

### Add music

1. Tap and hold in the music you want to add, → tap .
2. Click the following item to add music in it (if you don't want to add, tap Cancel).

### Delete music

Tap and hold in the music you want to delete, → tap .

### MultiSelect

Tap and hold in a song can do multiselect, tap  to select all or clear all.



## 21. My Video

☆ *Video file formats supported: MPEG1/2/4, MJPG, H263, H264 (720×480) resolution*

### Play Video




1. Tap the **My Video** application icon.
2. Select a video file from All/ Directories/My Favorites/User Defined Playlists to play it.
3. Tap on the screen by the touchpad or USB keyboard to display video controls

(adjust volume, pause/play, previous/next, adjust brightness).

4. Tap **Back button** or  to return to the **My Video** screen.

## The Operation with Video and Playlist

### Add playlist

1. Tap the User Defined Playlists  **Add New Playlist**.
2. Input the playlist name.
3. Tap Add.

### Rename or Delete playlist

Tap and hold in the playlist, → tap **Rename** or **Delete**.

### Add video

1. Tap and hold in the video you want to add, → tap **Add**.
2. Click the following item to add video in it (if you don't want to add, tap Cancel).






### Delete video

Tap and hold in the video you want to delete, → tap **Delete**.




## 22. My Photo

☆ *Photo file formats support: JPG, JPEG, BMP, and PNG.*

1. Tap the  **My Photo** application icon, → tap on a group of photos.
2. To view individual photo, tap on the desired photo.
3. Tap Back button to return to the photo gallery screen.
4. Tap  to make slideshow. There is Normal play, Reminiscently, Activity, Romantic, Tranquil and Fresh.
5. Tap  to make the picture sorted by color.
6. Tap  to make the picture sorted by time.
7. Tap  to make the picture sorted by name.


After entering a group of photos, tap and hold on a picture to enter multiple selections state. In the multiple selection state you can delete photos, and do dynamical switching wallpaper setting.

1.  — Multiselect.
2.  — Delete.

3.  — Add a picture to the group

### Doodle




In **My Photo** you can do doodle.

Click the icon  to enter doodle interface. You can select different doodle operations, including: word balloons, titles, stickers and brush.





## 23. Contacts


### Add New Contacts

1. Tap the  **Contacts** application icon.
2. Tap  → **New Contact**.
3. Tap in the name fields to enter the contact's first & last name.
4. Tap  at the right of options to reveal additional choices.
5. Tap on the option name to reveal choices.
6. Tap in the option entry fields to enter the contact's information.
7. Tap **Done**.

### Add Contact to Favorites


1. In the **Contacts** screen, tap on the desired contact name.
2. Tap  in the upper right corner.
3. Tap  to return to the **Contacts** screen.
4. Tap **Favorites** to view list of favorite contacts.

### Edit Contacts

1. In the **Contacts** screen, tap on the desired contact name you want to edit.
2. Tap  → **Edit Contact**.
3. Make desired changes, → tap **Done**.

### Delete Contacts


1. In the **Contacts** screen, touch & hold on the contact, → tap **Delete contact**.

OR, in the **Contacts** screen, tap on the contact you want to delete, tap  → **Delete Contact**.

2. Tap **OK** to confirm the deletion.



## 24. Picture Capture

You can capture a screen image by tapping  at any time.

Tap the  **Picture Capture** application icon to set options for a screen capture.

- Select a delay timer to automatically capture the screen in desired number of seconds.
- Select the default storage device for saving your images.

After the images are saved, they can be viewed through  **My Photo** application.




## 25. PK Manager



Use PK Manager to manage applications and widgets.

### Stopping Applications

Android does not automatically stop applications after they are loaded, so you can manually stop the applications as desired.

1. Tap the  **PK Manager** application icon. The list of applications that are running is displayed.
2. Tap on an application you want to stop, → tap **Force stop**.

### Uninstall Applications

1. Tap the  **PK Manager** application icon. The list of applications that are running is displayed.
2. Tap , → tap **Third Party** or **All** to list more applications.
3. Tap on an application you want to uninstall, → tap **Uninstall**.
4. Tap **OK** to confirm uninstall.

## 26. Wi-Fi Settings

Tap  **Wi-Fi Settings** application icon.

1. Select the box behind to open Wi-Fi;
2. All the AP in the vicinity will be listed, click to select the name you want to

connect to AP.

3. If the AP has been connected successfully, the AP information will be saved in the pop-up window. Select "Connect" to start to connect and choose "forget" to remove AP information.
4. If the AP is not encrypted, select "Connect" Start Connection in the pop-up window.
5. If the AP is encrypted, enter the password in the pop-up window, and click "Connect" to start connection.
6. When internet connections are successful, the wireless connection icon in the status bar appears.



## 27. ADSL Settings




Tap  ADSL Settings application icon.

Input name and password then click connect to access the broadband network.



## 28. Ethernet

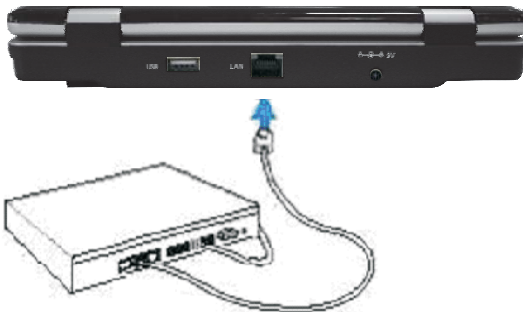

Plug the network cable into the Ethernet port, the status bar at the top of the screen displays "ETH" icon.






Tap  Ethernet application icon.

The device can automatically access network IP address connection. And you can choose manual setup for IP address to get a connection.



## 29. Settings

<b>Wireless &amp; Networks</b>	<b>Airplane mode</b>	Disable all wireless connections.
	<b>Wi-Fi</b>	Turn on Wi-Fi.
	<b>Wi-Fi settings</b>	Set up & manage wireless access points.
<b>Ethernet</b>		Configure Ethernet.
<b>PPPoE Settings</b>		Do ADSL settings. Input user name and password to connect.
<b>USB</b>	<b>Mass storage</b>	Configure USB to mass storage.
<b>Sound</b>	<b>Silent mode</b>	Silence all sounds except media & alarms.
	<b>Volume</b>	To adjust the Media volume, Alarm volume and Notification volume. Tap & slide  and then tap <b>OK</b> .
	<b>Notification Ringtone</b>	Select desired ringtone sound.
	<b>Audible selection</b>	Select to enable a sound when making a screen selection.
	<b>Screen lock sounds</b>	Play sounds when locking and unlocking the screen.
<b>Display</b>	<b>Brightness</b>	Tap & slide  to adjust the screen brightness as desired, and then tap <b>OK</b> .
	<b>Auto-rotate screen</b>	When selected, the orientation of the screen switches between Portrait and Landscape automatically when you rotate the device.
	<b>Screen timeout</b>	Adjust the delay before the screen automatically turns off.
	<b>Suspend timeout</b>	Adjust the delay before the device automatically suspends after the screen is turned off.
<b>Security</b>	<b>Set up screen lock</b>	Lock screen with a pattern, PIN, or password.
	<b>Visible passwords</b>	Show password as you type.
	<b>Select device Administrators</b>	Add or remove device administrators.
	<b>Use secure credential</b>	Allow applications to access secure certificates and other credentials.
	<b>Install from SD card</b>	Install encrypted certificates from SD card.
	<b>Set password</b>	Set or change the credential storage password.
	<b>Clear storage</b>	Clear credential storage of all contents except for password.
<b>Applications</b>	<b>Unknown sources</b>	Allow installation of non-Market applications.

	<b>App2sd</b>	<p>App2sd function:</p> <ul style="list-style-type: none"> <li>➤ In settings, don't enable app2sd when installing new software. Then all new software will be installed to the ROM.</li> <li>➤ In settings, enable app2sd when installing new software, then, Apk is defined according to its own and set to default on SD card or ROM (Some Apks may not be installed into SD card) <ul style="list-style-type: none"> <li>◆ If Apk is installed to SD card, and the user pulls the SD card, the desktop icons of Apk will disappear. There will be an error when running the Apk by the list of programs. Insert the SD card again but the Apk may not run either.</li> </ul> </li> <li>➤ In settings, whether you enable the app2sd or not the installed Apk could be moved between SD card and Rom through the Task Manager (Under the condition that the Apk supports installing to SD card).</li> </ul>
	<b>Manage applications</b>	Manage and remove installed applications.
	<b>Running services</b>	View and control currently running services.
	<b>Development</b>	Set options for application development.
	<b>Quick launch</b>	Set keyboard shortcuts to launch applications
<b>Privacy</b>	<b>Factory data reset</b>	<p>Tap to reset the device to its initial factory state, erasing all data and downloaded applications. Tap <b>Reset Device</b> to proceed with reset, or tap  to cancel and return to previous screen.</p> <p><b>WARNING:</b>The following will be erased during the factory reset:</p> <ul style="list-style-type: none"> <li>~ Google account</li> <li>~ System and application data and settings</li> <li>~ Downloaded applications</li> </ul> <p>The factory reset will NOT erase the following:</p> <ul style="list-style-type: none"> <li>~ Current system software and bundled applications</li> <li>~ SD card files, such as music or photos</li> </ul>
<b>SD Card, U-disk &amp; Device Storage</b>	<b>Total space, Available space</b>	Available space level appears when a SD card/U-disk is inserted into device.
	<b>Unmount SD card/U-disk</b>	When the SD card/U-disk is inserted, tap it to safely remove the SD card/U-disk.
	<b>Format SD card/U-disk</b>	N/A for this device.
<b>Search</b>		Search settings
<b>Language &amp; Keyboard</b>	<b>Select language</b>	Select the language and region according to your location.
	<b>Android keyboard</b>	Onscreen keyboard settings.
	<b>User dictionary</b>	For those words that may not be included in the default dictionary you can add words to a personal dictionary

<b>Date &amp; Time</b>	<b>Set date</b>	Set the date.
	<b>Select time zone</b>	Select the time zone.
	<b>Set time</b>	Set the time.
	<b>Use 24-hour format</b>	You can choose to use 24-hour format or 12-hour format.
	<b>Select date format</b>	You can select the date format.
<b>About device</b>		View Status (Battery, Wi-Fi, etc), Battery use, Legal information, Model number, Android version, Kernel version and Build number.

## Troubleshooting

### Basic Device Function

**Q: Do I have to charge the battery before use?**

A: Charge the battery for at least 4 hours, but you can use the device while it's charging.  
Use the power adapter to charge; this device does not charge via USB cable.

### Email

**Q: Can I use any of my personal email addresses to send/receive email?**

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

### Media Cards

**Q: Which media cards are compatible with my Device?**

A: Micro SD cards.

### Music

**Q: How do I add music files to my device?**

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

### Photos

**Q: How do I add photo files to my device?**

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

### Video

**Q: What type of video files can I play on my device?**

A: MPEG1/2/4、 MJPG、 H263、 H264 with 720 × 480 resolution

**Q: Can I play YouTube videos on my device?**

A: Yes. You can tap the YouTube application icon to quick access videos.

**Q: How do I add video files to my device?**

A: Copy the video files from your computer onto a SD card or USB storage device, then

use the File Browser application to copy the files into the device.

## Wi-Fi

**Q: Do I need a Wi-Fi adapter to connect to the Internet?**

A: No. The Wi-Fi adapter is built-in to the device.

## Battery Management

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 4 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

### Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (Approx. 4hour).

☆ *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as: .

A fully discharged battery takes approximately 5 hours to fully charge, but you can use the device while plugged in when desired.

## Important Safety Precautions


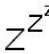
Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

### Clean your Device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

## Appendix I : The list of the main key function

Keys	Function	Keys	Function
F1	Browser	F2	My Music
F3	My Video	F4	My Photo
F5	Calculator	F6	WmtWeather
F7	MyRecorder	F8	Clock
F9	Calender	F10	File Browser
F11	Task Manager	F12	Settings
Fn+← (Home)	Back Home	Fn+→ (End)	Lock Screen
Delete & ←	Delete back or front words	Ctrl+Alt+Del	Restart device
Num Lock	Num Lock	Caps Lock	Caps Lock
Esc	Esc	Shift	Shift
Direction key (↑ ↓ ← →)	Direction key (↑ ↓ ← →)		Menu key
	Short tap to shut the screen		

**Note: The list above is for reference only. The actual application of the keyboard shall prevail.** Because Android system is different from other systems, the keys such as Pause Break、 Scroll Lock、 PrtSc SysRq、 Page Up、 Page Down and Insert have no function under the standard keyboard . Please pay attention during the process of usage!

## Specifications:

Display	7" TFT LCD 800x480
CPU	800MHZ
Memory Capacity	256M DDR2
Built-in Memory	2GB NAND Flash
Operation System	Android 2.2
WIFI	Built-in Wi-Fi (802.11b/g)
LAN	Built-in 10/100M LAN
Keyboard	80 Keys Keyboard
Mouse & Touch Pad	Support USB Mouse & Built-in Touch Pad
USB Port	3×USB Port
Card Port	SD/MMC card reader
Sound Effect	Audio build-in 2 Stereo Speaker
	External Microphone, 3.5mm Earphone
Applications	King Kong Apps Market, Internet Browser, Office, Calendar, Calculator, E-mail, Instant Message
Entertainment	Picture Viewing, Music / Video Playback, Games
Battery	7.4V / 1600MAH
Power	110-220V Input, 9V DC Output, 1.5A